GB WA 43410

PROGRAMME GUIDE

A. "On/Off" button with indicator light
B. Additional functions
C. Temperature Knob
D. Programme selector knob
E. Programme Sequence Indicator:

Waschen / *Lavage* Spülen / *Rinçage*
Vorwäsche / *Prélavage* – – Schleudern / *Essorage*

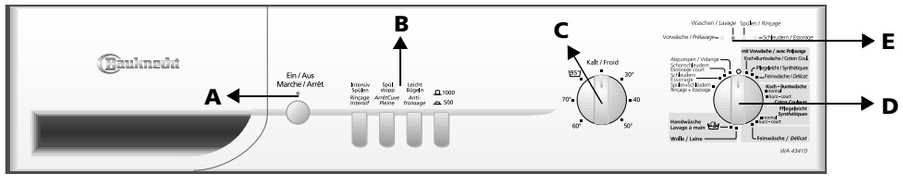

The running noises of the new, electronically-controlled motor are not the same as the ones you are used to from your old appliance. Don't be surprised - modern technology has a modern sound.

During the selected washing programme the programme selector knob moves by steps clockwise and could correct itself by half steps.

Programme		Care Labels	Type of wash/ Degree of soiling	Max. load	Detergent and Additives			Additional selectable functions ❇				Notes
					Softe-ner	Main Wash	Pre-wash	Intensive Rinse	Rinse Hold	Easy Ironing	Spin Speed Reduction	
				Kg				Intensiv Spülen *Rinçage Intensif*	Spülstopp *Arrêt Cuve Pleine*	Leicht Bügeln *Anti-froissage*	*1000 500*	
Coloured cotton with prewash	Koch-Buntwäsche **mit Vorwäsche** *Coton Coul.* ***avec Prélavage***	95	Heavily soiled and temperature resistant bed linen, table linen and underwear, towels etc. made of cotton and linen.	5.0	❇	Yes	Yes	❇	❇	❇	❇	–
Synthetic with prewash	Pflegeleicht **mit Vorwäsche** *Synthétiques* ***avec Prélavage***	60	Heavily soiled blouses, shirts etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or blends with cotton.	2.5	❇	Yes	Yes	❇	❇	❇	❇ 1)	–
Delicate with prewash	Feinwäsche **mit Vorwäsche** *Délicat* ***avec Prélavage***	40	Heavily soiled curtains and delicate clothing, dresses skirts, shirts and blouses.	1.5	❇	Yes	Yes	–	❇	–	❇ 1)	–
Coloured cotton normal	**Koch - Buntwäsche** normal ***Coton Couleurs*** *normal*	95 60 40 30	Slightly to normally soiled bed linen, table linen and underwear, towels, shirts etc. made of cotton and linen.	5.0	❇	Yes	–	❇	❇	❇	❇	–
Coloured cotton rapid	**Koch - Buntwäsche** kurz ***Coton Couleurs*** *court*	60 40 30	Lightly soiled outer garments and sportswear made of cotton, polyester, polyamide and cotton blend.	5.0	❇	Yes	–	❇	❇	❇	❇	–
Synthetic normal	**Pflegeleicht** normal ***Synthétiques*** *normal*	60 50	Slightly to normally soiled blouses, shirts etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or blends with cotton.	2.5	❇	Yes	–	❇	❇	❇	❇ 1)	–
Synthetic rapid	**Pflegeleicht** kurz ***Synthétiques*** *court*	40 30	Slightly to normally soiled blouses, shirts etc. made of polyester (Diolen, Trevira), polyamide (Perlon, Nylon) or blends with cotton.	2.5	❇	Yes	–	❇	❇	❇	❇ 1)	–
Delicate	**Feinwäsche** ***Délicat***	40 30	Curtains and delicate dresses, skirts, shirts and blouses.	1.5	❇	Yes	–	–	❇	–	❇ 1)	–
Wool	**Wolle** / ***Laine***		Only woollens with a felt-free finish, labelled with the woolmark and identified as machine washable.	1.0	❇	Yes	–	–	❇	–	❇ 1)	If you select "Rinse Hold" do not leave items to soak for too long.
Hand wash	**Handwäsche** ***Lavage à main***		Textiles made of linen, silk, wool and viscose marked as "handwashable".	1.0	❇	Yes	–	–	❇	–	❇ 2)	If you select "Rinse Hold" do not leave items to soak for too long.
Rinse + Spin	Spülen+Schleudern *Rinçage + Essorage*	–	–	5.0	❇	–	–	–	–	–	❇	With this programme you can add starch and/or fabric softener. Subsequent spinning is intensive.
Spin	Schleudern *Essorage*	–	–	5.0	–	–	–	–	–	–	❇	In this programme spinning is intensive. Same as the spin cycle in the "Coloured Cotton" programme.
Gentle spin	Schonschleudern *Essorage court*	–	–	1.5	–	–	–	–	–	–	❇ 1)	A very gentle spin is used in this programme. Same as the spin cycle in the "Wool" programme.
Drain	Abpumpen / *Vidange*	–	–	–	–	–	–	–	–	–	–	Drain only - no spinning. Alternative method of terminating the synthetic, delicate and wool programme and for premature removal of the laundry.

❇: Option / Yes: dosing required.

1) For improved garment care spin speed is restricted to 900 rpm in this programme.

2) For improved garment care spin speed is restricted to 400 rpm in this programme.

Further advice is to be found in the instructions for use (Subject to technical alterations).

5019 401 05116

Black process 45.0° 100.0 LPI

4gb05116.fm Page 2 Tuesday, October 7, 2003 12:52 PM

CONSUMPTION DATA *

Programme	Temperature selector knob (°C)	Load (kg)	Water (l)	Energy (kWh)	Programme duration ** approx. (hours : minutes)
Coloured Cotton	90	5.0	54***	1.70	2:00
Coloured Cotton	60	5.0	49	0.95	2:00
Coloured Cotton	40	5.0	49	0.60	2:05
Synthetic	60	2.5	55	0.80	1:30
Synthetic	40	2.5	55	0.60	1:20
Delicate	40	1.5	60	0.60	0:45
Wool	40	1.0	60	0.45	0:40
Handwash	30	1.0	60	0.30	0:40

* **Consumption values** were measured in normalized conditions in compliance with Standard IEC 60456.
** The **programme duration** can also vary from the chart values. The washing machine is able to allow for particular household conditions and to adapt the programme run time accordingly.
*** To reduce the **water temperature**, some cold water is added at the end of the main wash cycle, before the pump drains the water out.

POUR IN DETERGENT, CLOSE DOOR AND SELECT PROGRAMME

Add the detergent as described in the "Detergent and Additives" chapter of the instructions for use.

1. Turn the **programme selector knob** clockwise to the desired programme.
2. Turn the **temperature selector** in any direction to the desired temperature.
3. **Special options** can be selected.
4. Check that the door is firmly closed and turn on the washing machine by pressing the **"ON/OFF"** button. The indicator lights up, indicating that the washing machine is on.

SELECT SPECIAL OPTIONS

Intensive Rinse
(Intensiv Spülen; *Rinçage Intensif)*

Increases the rinsing time and water quantity. This additional option is particularly suitable for areas with very soft water, washing baby linen and helps people with detergent allergies.

Rinse hold
(Spülstopp; *Arrêt Cuve Pleine)*

This option is particularly recommended for the programme "Synthetics" or "Delicates". The laundry remains in the last rinse water without being spun: discoloration of the laundry or additional creasing is prevented.

Terminate the "Rinse Hold" option:

Press the "Rinse Hold" button again; the wash cycle will terminate automatically with the appropriate spin cycle for the current programme.

If you do not wish to spin the clothes, press the Rinse stop button, turn the programme selector knob to the "Drain" programme and switch the machine on again.

Easy Ironing
(Leicht Bügeln; *Anti-froissage)*

Can be used together with Cotton and Synthetics programmes to reduce creasing.

Increases the water quantity and the clothes are spun very gently.

Spin Speed reduction $\frac{\Delta}{\Delta}\frac{1000}{500}$

Reduces the preselected maximum spin speed. In some programmes, the final maximum spin speed is limited in order to protect the laundry. Selecting a higher speed is not possible.

CANCEL PROGRAMME

1. Switch off the washing machine by pressing the "**ON/OFF**" button.
2. Set the programme selector to programme setting "Drain".
3. Start the programme by pressing the "**ON/OFF**" button.

PROGRAMME END

- At the end of the programme the programme selector is located at the "O" end position.
- Switch off the appliance, open the door and take out the laundry.
- Turn off the tap and leave the door ajar to allow the drum to dry out.

Black process 45.0° 100.0 LPI